PTAB7200: User Manual size: 78.0cm x 64.0cm 9/26/2011

Polaroid

7" Internet Tablet
Wi-Fi Touch Screen
PTAB7200

User Manual

In the box

Location of controls

1. Power on/off
2. Volume up/down button
3. (HOME) button
4. (BACK) button
5. (MENU) button
6. 7" TOUCH screen
7. Charging Indicator
8. Headphone jack
9. Micro SD slot
10. USB port
11. AC adapter jack
12. Speaker on the bottom
13. RESET hole on the back

Home screen button: Press to go back to the Home screen.

Previous screen: Go back to the previous screen

MENU: Press to access the menus of apps or screens of the Tablet

Basic operation

Charging the battery:

Connect the Tablet to a wall outlet using the included AC adapter.



When charging, the indicator light is red and will turn off after the Tablet is fully charged (Approximately 5 hours).

Approximate play times:
(actual play times may vary depending on display and power settings)
- Video: 4.5 - 5 hours (Wi-Fi turned off)
- Video: 4.5 - 5 hours (Wi-Fi turned off)
- eBook: 6 - 7 hours (Wi-Fi turned off)
- Web browsing: 3 - 4 hours
- Standby time: 80 - 90 hours

Battery Tips:
- *To optimize battery life using the tablet, run the battery close to exhaustion and charge the Tablet for 12 hours.*
- *Set the Tablet to standby mode (the display is off) to shorten charging time.*
- *To optimize battery time and performance, adjust the "Brightness" and "Screen timeout" options in the Settings app and shut Wi-Fi when not in use.*

Inserting a Micro SD card (not included):

Insert a Micro SD card before transferring media files.

The Tablet supports **Micro SD cards** (up to **32GB**). Since the internal memory is limited, it is important to purchase a Micro SD card to expand the memory to save audio, video and picture files.

To install a Micro SD card into the Tablet:

1. Turn off the Tablet.
2. Insert the card (face up as shown) into the card slot until it clicks and locks into place.
3. To access the Micro SD card, select "Explorer" from the Apps screen.

Unmount & remove the Micro SD card:

1. Open "Settings"
2. Select "Storage"
3. Select "Unmount Micro SD card"
4. It is now safe to remove the card from the Tablet.
5. To remove the card, gently push it in until it pops out.



- *It is strongly recommended to purchase and install a Micro SD card before downloading media files to the Tablet.*
- *A card can only be inserted one way do not use force when inserting the card.*
- *Make sure to unmount the card before taking it out of the Tablet.*

Connecting a USB stick:

1. Insert the **"USB stick adapter"** into the USB port of the Tablet.
2. Insert the USB stick into the other end of the **"USB stick adapter"**
3. To access the USB stick, select "Explorer" from the Apps screen.



Turning on or off:

Powering on:
Press and hold the button until the lock screen appears, and slide the **"Lock icon"** to the right.

Powering off:
- To activate or deactivate silent mode, slide the **"Speaker icon"** to the left.
- To lock or unlock the Tablet, briefly press the button (Locks the device to conserve battery life).

Home screens

Standby:
Briefly press the button for standby mode the display will shut but the device will still be powered on - this will extend battery time).

Powering off:
Press and hold the button until the "Power off" window appears, and select "OK" to shutdown.

You can also use (Power widget on the Home screen or "Power" on the Apps screen to safely power off.

The Home screens are a great place to customize the Tablet by adding widgets, shortcuts or custom wallpaper.

There are five Home screens in total that may be accessed by tapping on the bottom left or right of the display as shown below.

Multimedia screen:
When the Tablet is powered on, the Multimedia screen appears, where music, pictures, video and clock may be easily accessed.

Bookmarks widget:
Tap on the bottom left of the display until the Bookmarks widget appears where all the websites that are saved as bookmarks can be easily accessed.

To add or delete bookmarks, see **"Web browsing>Adding and deleting bookmarks"**.

Search widget:
Tap on the bottom left of the display until the Search widget appears to easily access the Google search engine.

Power widgets:
Tap on the bottom right of the display until the Power widgets appear - to easily power off, turn Wi-Fi on/off, or adjust the brightness of the display.

(Power button
Power off window
Power widget (Home screen)
Tap right or left (To change Home screens)
Multimedia (Home screen)
Bookmarks widget (Home screen)
Search widget (Home screen)
Power widgets (Home screen)

Home screen menu:
While on the Home screen, press the button to access the Home screen menu.

Notifications:

Displays the status of items being downloaded as well as other activities of the Tablet.

Once an item has been completely downloaded it is possible to open the file.

Turn on/off USB port (to transfer files from/to PC or Micro SD card)
Download progress
Once the download is complete, press here to open.

Adding widgets or apps to the Home screen:

To customize the Home screen by adding your favorite apps or widgets, press the button to show the **"Add to Home screen"** window.

Select "Shortcuts", "Widgets" or "Wallpapers" from the list.

Widget list
(Add widgets to the Home screen)
Shortcut list
(Add apps to the Home screen)
Wallpaper list
(Change wallpaper on the Home screen)

Removing widgets or apps from the Home screen:

Press and hold the widget or app icon you want to remove from the Home screen, drag it to the "Remove" icon on the bottom of the display, and drag it into the Trash icon to remove it from the Home screen.

Wallpaper:

You can also change the wallpaper by pressing the button from the Home screen menu.

Apps screen

Press the icon on the bottom of the Home screen to access the Apps screen where all the apps are displayed by return to the Home screen press the icon.

When the page is full scroll up or down to access more apps.

Connecting to Wi-Fi

To browse web sites, use e-mail and download apps, you must first connect the Tablet to the internet. Follow the instructions below to set up Wi-Fi on the Tablet.

1. Select "WLAN" on the Apps screen and select "Turn on Wi-Fi".
2. Select "Wi-Fi settings".
3. Make sure that "Network notification" is checked.
4. Select a network, and if required enter the correct password.
5. When the Tablet is connected to a network, the Wi-Fi icon will appear on the top info bar and "Connected" will appear under the selected network.

To conserve battery life, turn off Wi-Fi when not connected to a network.

Setting up e-mail

Select "Email" on the Home or Apps screen and follow the instructions to set up your email account on the Tablet. (You must connect to Wi-Fi before accessing or setting up email accounts).

Web browsing

Select "Browser" on the Home or Apps screen. Must connect to Wi-Fi before accessing the web).

Viewing web pages:
Use the on-Zoom buttons which appear at the bottom right of the page (when scrolling up or down) to zoom in or out.

Adding and deleting bookmarks:

1. Press the **"Bookmarks button"**.
2. Select **"Add bookmark"** to add the current website.

3. While using the web browser, press the button and select "Bookmarks" or on the Bookmarks widget on the Home screen to access your favorite, saved websites.

4. To delete a bookmark, press and hold the bookmark you wish to delete, and select "Delete bookmark" on the screen that appears.

Note: When you add or delete a website to or from "Bookmarks", it will also be adjusted on the "Bookmarks" widget of the Home screen.

Downloading apps

To access a large library of free/paid apps and games, we recommend downloading the Amazon Appstore - follow the instructions below to download it directly to the Apps screen of the Tablet.

It is recommended to insert a Micro SD card (not included) before downloading apps.

1. Go to the "Amazon" widget on the Home screen, and select "Appstore"
2. Appstore links are provided - both go to the same download page.

Downloading and installing apps:

After downloading the Amazon Appstore, it is possible to download and install apps directly to the Tablet - these apps will appear on the Apps screen.

Select "Appstore" on the Apps screen and create an Amazon account (setting up the account is free). Once an account is created, it is easy to purchase, download and install apps directly to the Tablet.

Note: Apps compatibility / games:

There are many apps available on the Amazon Appstore, but unfortunately not all will be compatible with the Tablet, this is because some of the apps are designed for mobile phones and require functions or specifications that are not supported by the Tablet (such as camera, GPS, accelerometer, etc.). Try the free version of an app and testing it before purchasing the paid app.

"Avoid apps that require camera or GPS as these apps will not be supported by the Tablet.

The Tablet supports many game apps - although we recommend always testing the free version of available before purchasing.

To purchase and wirelessly download music to the Tablet, install the Amazon MP3 app.

Note: *It is recommended to insert a Micro SD card before downloading music or apps to the Tablet.*

1. Open the Appstore and select "Amazon MP3".
2. Select "Free".
3. Select "Install" to download the app installer.
4. Select "Install" to install the app on the Tablet, it will appear on the Apps screen.

Polaroid and the manufacturer of this tablet are not affiliated with, connected to, or sponsored by Amazon, Amazon appstore, and the Amazon MP3 app - we are not responsible for the content, policies, practices, or services of Amazon or of the wide availability of apps, user experience, and customer service.

Note: The Amazon appstore is available free to download at www.amazon.com

eBooks

Kobo app:
Read from over 2 million books over 1million free eBooks! with the included Kobo app.

Managing apps

App Manager:
Use the App Manager to optimize the performance of the Tablet by freeing up internal memory, uninstalling and terminating running apps.

Download:
Displays all the downloaded apps these apps may be uninstalled or moved to the Micro SD card.

All:
Displays all apps installed on the Tablet (it is not possible to delete or move pre-installed apps).

On Micro SD Card:
Displays the apps that are able to be moved to the Micro SD card (the apps that are checked have already been moved).

Running:
Displays currently running apps.

Moving apps to the Micro SD card:
To free up additional space in the internal memory of the Tablet, it is necessary to free the internal memory by using the "Move to SD Card" option.

1) Insert a Micro SD card into the Tablet.
2) Open the App Manager and select "On Micro SD Card"
3) Select the apps that you wish to move (apps that have check marks are already moved to the Micro SD card).
4) Select "Move to SD Card".

App Manager screen

Clear cache
Clear app space on the internal memory.
Uninstall
Use this option for apps that are not functioning properly (also related to the app such as username/password) may be deleted.

App options screen

Apkinstaller:
Apps can be downloaded from an app store directly to the Tablet and do not require the Apkinstaller.

Apkinstaller screen

In the event that you'd like to manually install an apk file directly to the Tablet, copy the apk file to the internal memory or Micro SD card, and use the Apkinstaller to find and install the app.

To install apk files that are copied directly to the internal memory of the Tablet or inserted Micro SD card, use the Apkinstaller app as shown below.

Download:
Use the Download app to find files that have been downloaded to the Tablet.

Transferring and managing files

It is possible to manage and transfer media files to the Tablet by connecting it to your computer as shown below. Before transferring media files to the Tablet, we strongly recommend inserting a Micro SD card - this will free up the internal memory and allow you to download more apps to the Tablet.

Connecting to a PC or Mac:

1) Connect the included USB cable to the **"USB port"** of the Tablet and USB port of the computer.

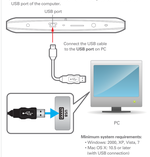
USB port
Connect the USB cable to the USB port on PC
PC
Minimum system requirements:
• Windows: 2000, XP, Vista, 7
• Mac OS X: 10.3 or later (with USB connection)

2) The "USB connected" screen appears, select "Turn on USB storage"

Note: *If the "USB connected" screen does not appear when connecting the USB cable to the computer, try pressing the button on the Home screen and select "Notifications" > "USB connected".*

3) The **"Autoplay"** windows appear on your computer's display - select **"Open folder to view files"** to manage files on the Tablet and Micro SD card (if inserted).

"INTERNAL" (Displays the internal memory)
Conserve Internal Memory!
Avoid transferring media files in "INTERNAL" (internal memory/Tablet)
Removable Disk (K:)
"Removable Disk" (access the Micro SD card (if inserted)
Conserve Internal Memory!
Transfer media files to "Removable Disk" (Micro SD card)

Tips: *Transfer and store media files such as music, pictures and video on to a Micro SD card and avoid placing these types of files in the internal memory of the Tablet - this will conserve the internal memory, and allow you to download more apps.*

4) Copy media files to the Micro SD card (if inserted).

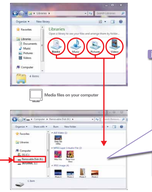

Tips: *Organize your media (pictures, videos and music) by creating folders such as "Pictures", Videos" and "Music" on the Micro SD card as shown below.*

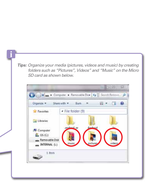

5) Select "Turn off USB storage" to disconnect from the computer.

Multimedia

Use the Tablet to store and play music, pictures and video files. Since the internal memory is limited, store the files on a Micro SD card.

Music:
Access music files stored on the Tablet.

Apps screen

3. Select the Downloads app on the Apps screen.

4. Select "Amazon_Appstore-release.apk".

5. Select "Install" to install the Appstore on the Tablet.

6. The Appstore appears on the Apps screen.

Connecting to Wi-Fi

To conserve battery life, turn off Wi-Fi when not connected to a network.

Setting up e-mail

Web browsing

Downloading apps

Browsing files

Explorer app:
To view, open, copy or delete files on the internal memory of the Tablet, inserted Micro SD card or USB stick, select "Explorer" on the Apps screen.

1. Briefly press a file or folder to open it. To copy, move or delete a file or folder, press and hold it until the options window appears.

Settings

2. Select an option from the options window.

3. If you select "Copy" or "Move", use the "Home" or "LevelUp" options on the top bar, and select a location to move the file or folder to, and press "Edit/or" and select "Paste".

Resetting

In the event that the Tablet freezes or does not function properly, try correcting the problem by pressing the **RESET** button located on the back panel (shown below).

Use a paper clip or the tip of a stylus to press the **RESET** button. Data stored on the Tablet will not be affected by using the **RESET** button.

Online help

Select "Online Help" on the Apps screen to access:
- New apps and updates for current apps
- Frequently asked
- Technical support
- Product registration

Legal information

FCC Part 15:

This device complies with the latest standard and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation."

Shielded USB cables must be used with this unit to ensure compliance with the Class B FCC limits.

PLR IP Holdings, LLC, its licensees and affiliates, fully support all electronic waste recycling efforts and encourage the proper disposal of this product at the end of its established term, you should properly dispose of this product in compliance with all applicable regulations, directives or other governances in the area where you reside. Please contact your local authorities for more information on the nearest facility to determine a location where you can appropriately dispose of the product.

You may also go to HYPERLINK "http://www.polaroid.com" www.polaroid.com and select "Support" to find out more about how to dispose of your specific item in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to ensure all of the data cannot access and personal data cannot be recovered. Please refer to the device's user manual for instructions on how to perform a data sanitization process. You may also want to contact your local waste recycling facility to determine their sanitization procedures during the recycling process.

Limited Warranty

This product as supplied and distributed new by IMT Inc. ("IMT") is the original consumer purchaser is warranted by IMT against defects in material and workmanship for a period of one (1) year from the original date of purchase. If, in the unlikely event that a product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center listed below for repair.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Detail bill of sale)
- Please ship product prepaid to the authorized service center, and remember to insure it.
- Include a return shipping address no PO. Boxes), a telephone contact number and a description of the problem.
- Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines the product is defective. Products returned damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

(+ADD) Inc.
Attention: Customer Service (2nd Floor)
1 Bridge Plaza
Brooklyn, NY 11232

IN NO EVENT SHALL IMT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, LOST PROFITS OR REVENUES, LOSS OF USE OF THE PRODUCT OR ANY ASSOCIATED EQUIPMENT, DOWNTIME COSTS) AS DESCRIBED IN ALL NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at :

Customer Support:
1-877-768-8491 (Toll Free)
polaroidtabletsupport@manufacturersupport.com

Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 2PM (EST)

FRONT

BACK